



MIII DIAGNOSTICS SOFTWARE INSTALLATION

(1) Download the setup file from link: <http://nhct.com.vn/resource/AgriROBOTECH/MIIIDiagnostic.zip>


(2) Unzip then click on Setup.msi to run the installation

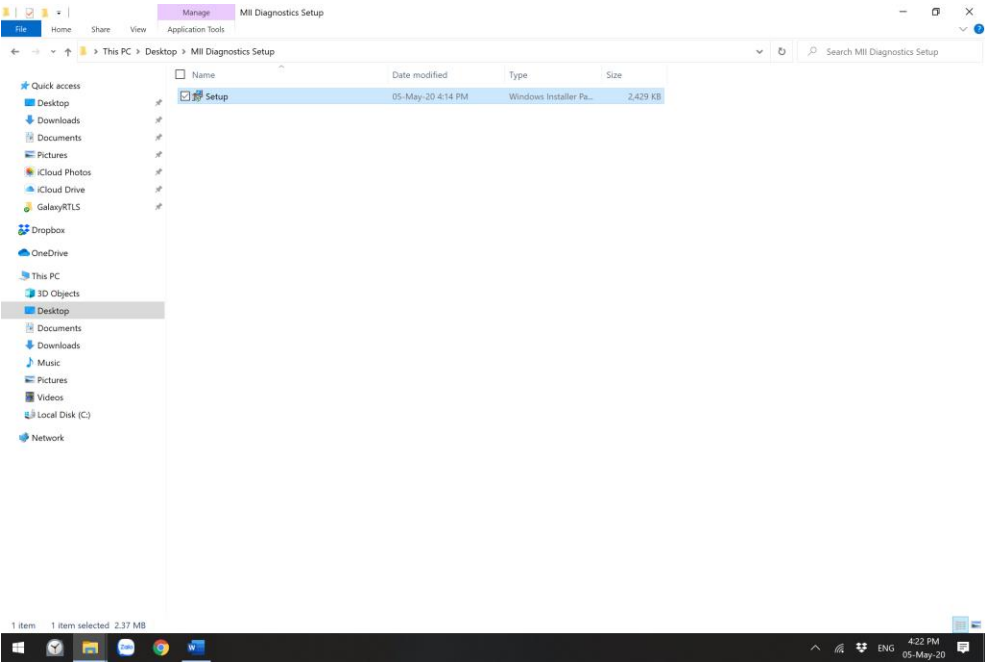


(3) Follow the instruction to install the software:

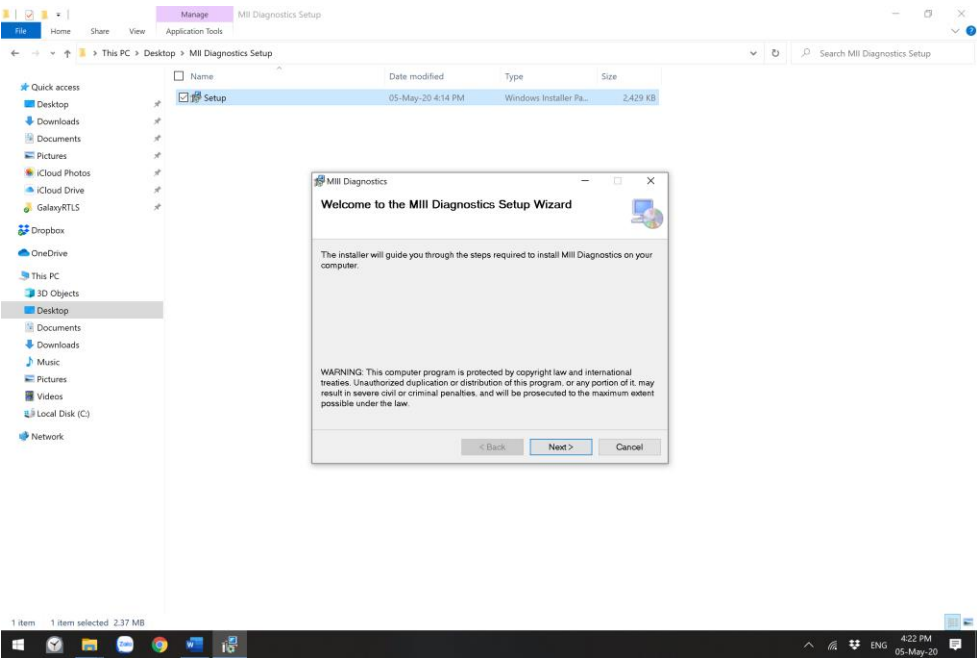

Click **Next**

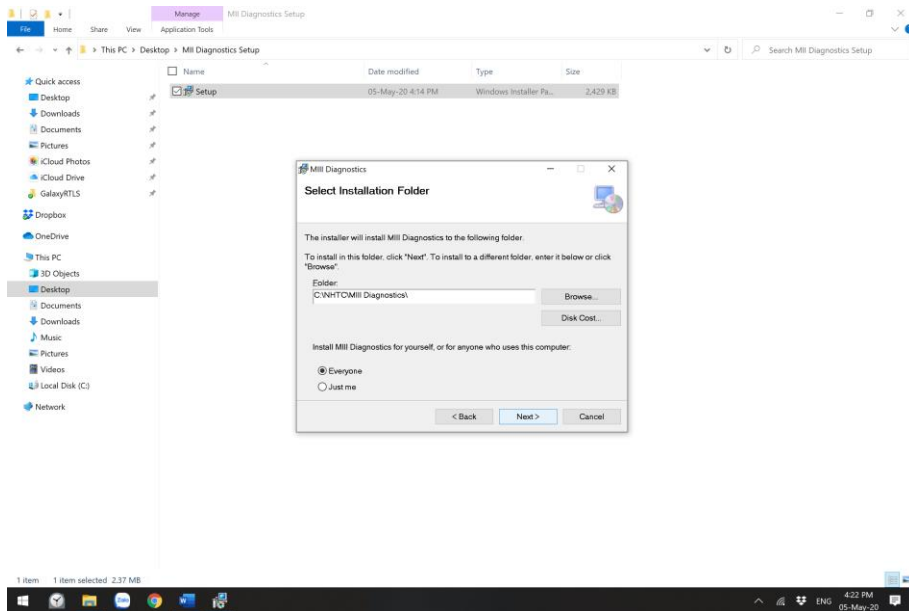


Click **Next**

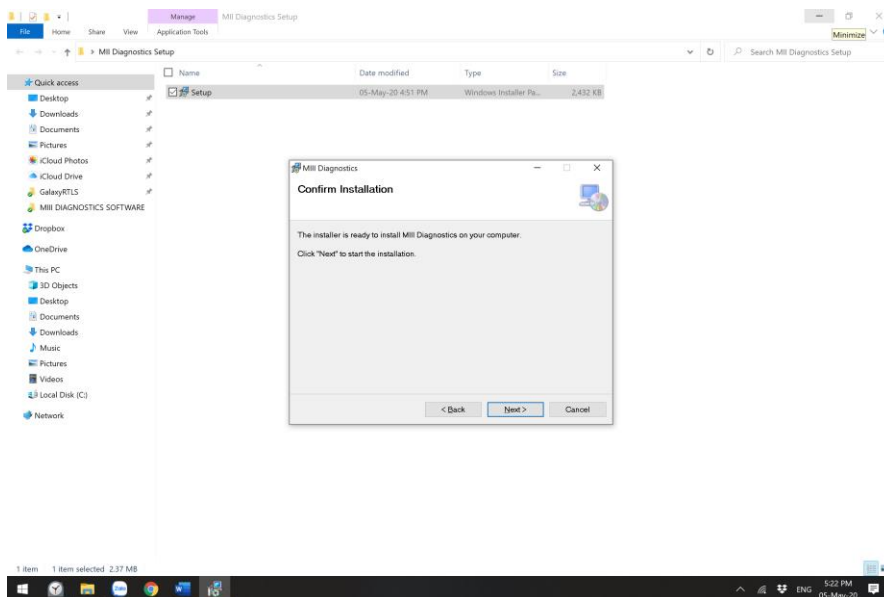


Click **Next** to confirm

Select **Yes** in the next windows:

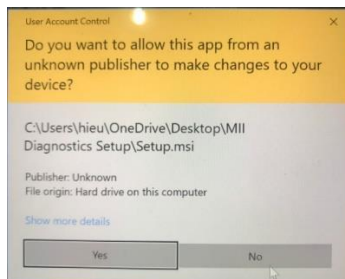


Click **Close** to finish the installation.

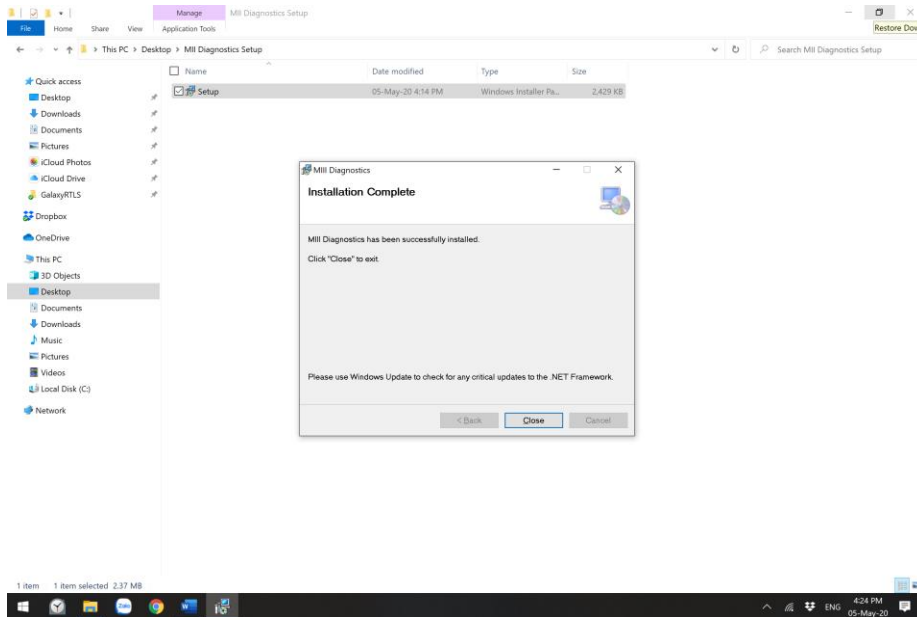


Run the software from the desktop shortcut: MIII Diagnostics


At the first time, the software asked to input the license key, please input the valid license key and activate:

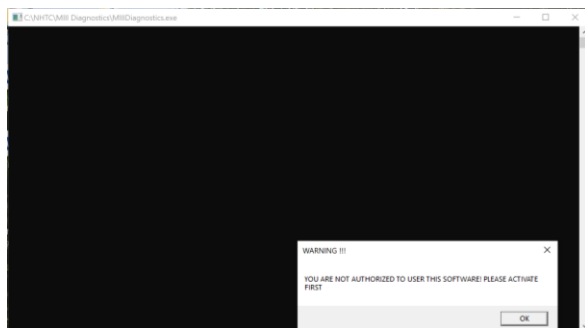

Click **OK**

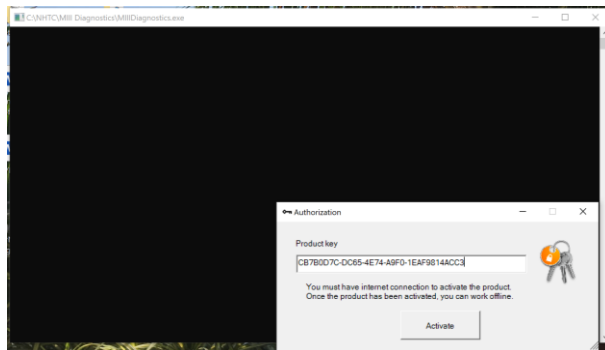

Input the valid license key then click Active. Please make sure your computer/laptop is connected to the internet in this activate phase.

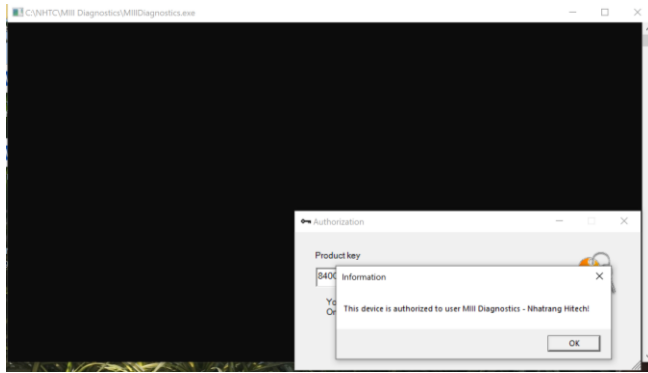

From the second time, it will no longer ask the license key again for this computer/laptop.

Nhatrang Hitech company, Ltd

Website: <http://nhhc.com.vn>

Email: info@nhhc.com.vn